

BULLDOGPRESSES

INSTRUCTIONS MANUAL

CONTENTS

1 x BulldogPress DripTech



1 x Electrical cord.



1 x Handle *THE HANDLE IS ALSO USED FOR TIGHTNING AND LOSENING OF BOTTLE JACK KNOB.*



Starter pack 1

- 1 x Dab tool
- 1 x Silicone tub
- 1 x Magnet
- 5 x Silicone Paper



Starter Pack 2

- 1 x 36 Micron bag
- 1 x 90 Micron bag
- 1 x 160 Micron bag




The S110 Bulldog Press DripTech

Introducing the BulldogPress S110 DripTech

The DripTech is specially designed to remove Rosin from heated plates faster to preserve the Terpenes for better all-round quality.

Turning the BulldogPress into a normal press

1. Turn the release button to the left to release the plates.
2. Hold the Bottle Jack firmly in your hand and lift it upwards pushing the top of the Bottle Jack flat against the heating plates.
3. Gently turn Bottle Jack around to face the front of the Press.
4. Make sure the pin on top of Bottle Jack is inserted into centre hole of the plate.
5. Close release knob and take up slack between Jack and Plates.

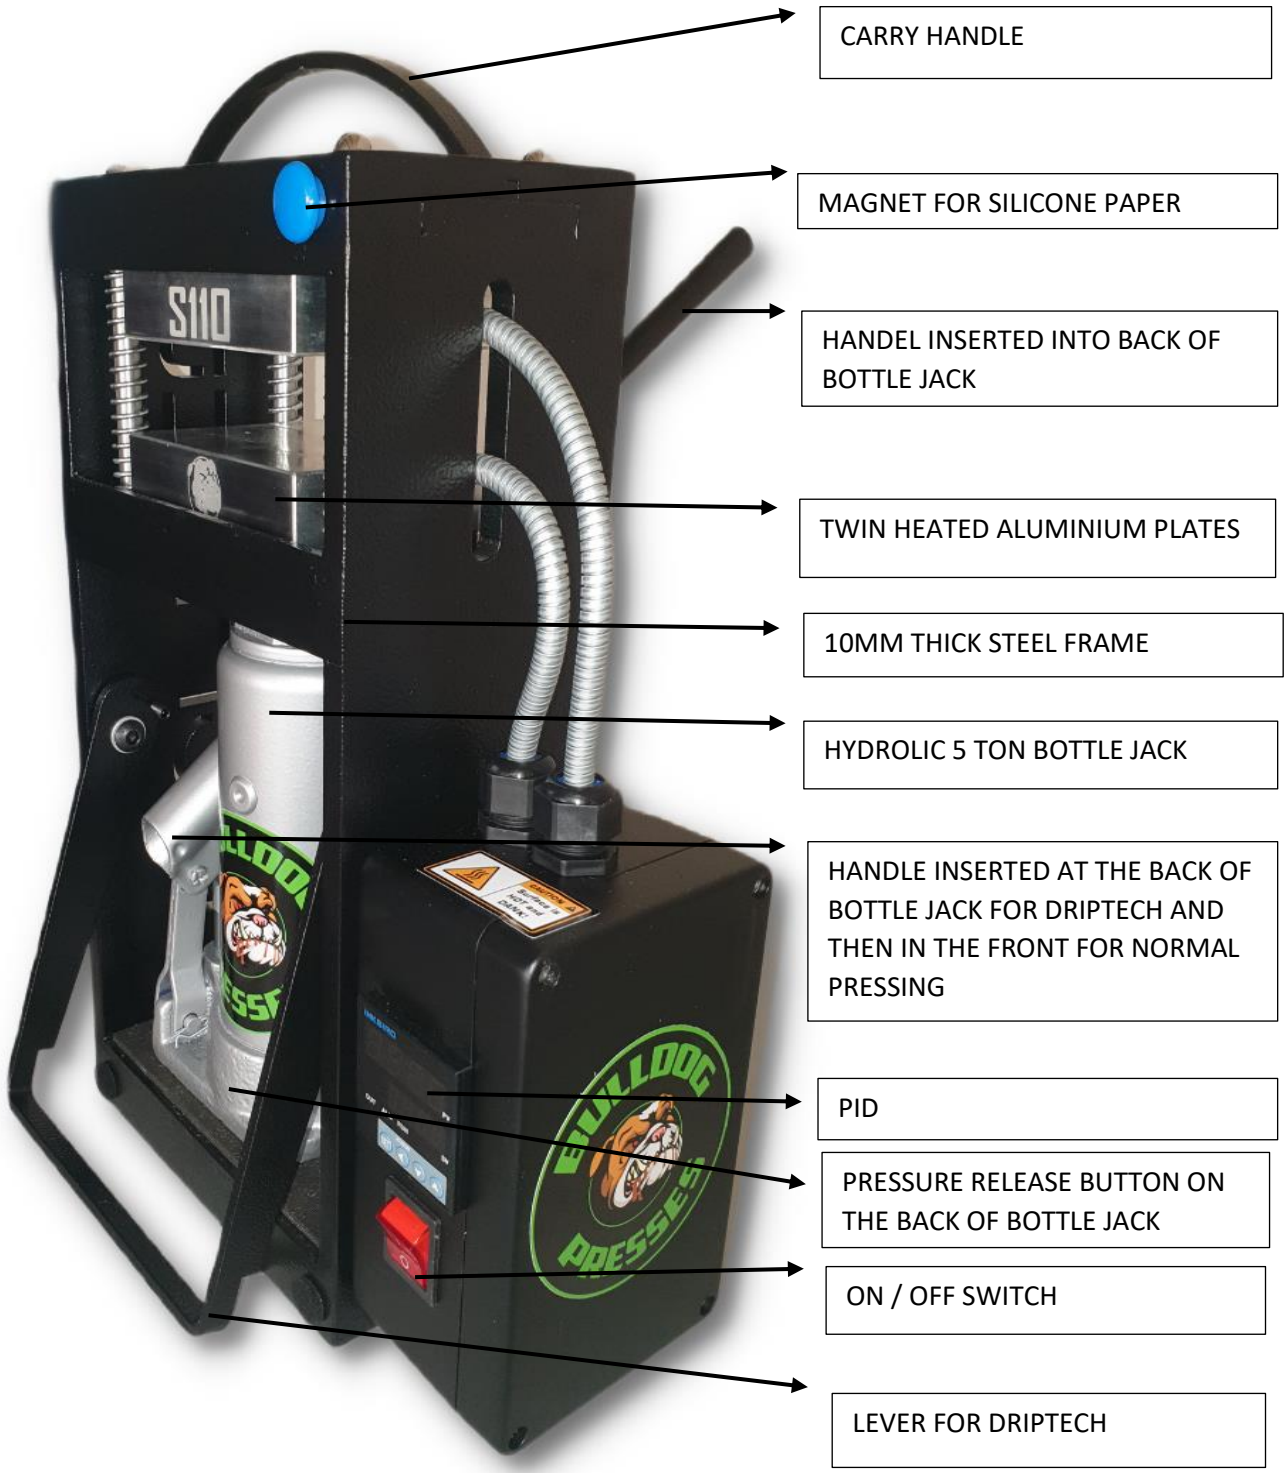

CARRY HANDLE

MAGNET FOR SILICONE PAPER

HANDEL INSERTED INTO BACK OF BOTTLE JACK

TWIN HEATED ALUMINIUM PLATES

10MM THICK STEEL FRAME

HYDROLIC 5 TON BOTTLE JACK

HANDLE INSERTED AT THE BACK OF BOTTLE JACK FOR DRIPTECH AND THEN IN THE FRONT FOR NORMAL PRESSING

PID

PRESSURE RELEASE BUTTON ON THE BACK OF BOTTLE JACK

ON / OFF SWITCH

LEVER FOR DRIPTECH

INSTRUCTIONS

- 1. Make sure your BulldogPress is situated on a strong level surface.**
- 2. Plug in your BulldogPress with the cable provided.**
- 3. Place the handle provided into the 5 Ton Jack.**
- 4. Turn the Pressure release button to the left, if it's too tight use a pliers, the plates will then release. (Only tighten the Pressure release button when ready to Press).**
- 5. Your press is already set to a standard 90 degrees Celsius, wait for it to regulate both plates to 90 degrees Celsius. (Temperature will go a bit higher but will regulate back down)**
- 6. Tighten the Pressure release button to the right.**
- 7. Place your product in the Silicone paper and place in the centre of the heated plates. Stick the Magnet provided on the top of our press holding up the Parchment paper to view your rosin extraction.**
- 8. Slowly jack the Handle up and down till plates touch your flower.**
- 9. Pull out the lever, then tilt the press till it is resting comfortably on the lever.**
- 10.Keep pressure there for some time allowing the trichomes to melt before applying full pressure.**
- 11.Place a Silicone mat or Parchment paper under the plates to collect rosin.**
- 12.Press product to a maxim pressure (do not overkill) and then tilt the Press Back to normal standing position.**
- 13.Release the plates by turning the release button to the left.**
- 14.Remove the Silicone paper and place it on a cold surface.**
- 15.Use your Dab Tool Provided to carefully remove the Rosen off the parchment paper.**
- 16.Place your freshly picked Rosen into your Silicone Tub Provided and store it in a cool place.**

You can use your Micron bags Provide for Bubble hash, sugar trimmings or bud. See instructions provided or check out www.skullskreens.com

When you need to set PID to different temperatures please see enclosed manual. For further information go to www.bulldogpress.co.za or contact Kevin on 082 731 6725